

# FRIGOCAT

## *indelB*

**trouble shooting**

# FRIGOCAT

- 3 - 4      HOW TO DETECT TYPE OF FAULT
- 5            HOW TO REPLACE THE FAN
- 6            HOW TO REPLACE THE PLATE

*indelB*

FRIGOCAT\_11-12-2018

# HOW TO DETECT TYPE OF FAULT

The refrigerator operates but it heats the intern

Wrong connection

Reverse the red and black cable

The refrigerator doesn't operate

Check if the switch is placed on "ON"

No

Place the switch on "ON"

Ok

Is the fuse of the connection plug ok?  
(Fig.1)

No

Replace the fuse



Fig. 1



Fig. 2

Test with a tester if there is a short circuit (Fig.2)

The fan  
doesn't  
operate

Test with a  
tester if  
there is a  
short circuit

yes

Replace the  
connection  
cables

No

Replace the  
fan

The fan  
operates but  
the  
refrigerator  
doesn't  
refrigerate

Replace the  
plate


## HOW TO REPLACE THE FAN



1. Unscrew the metallic carter  
(2 bolts)




2. Unscrew the 3 bolts fixing the fan

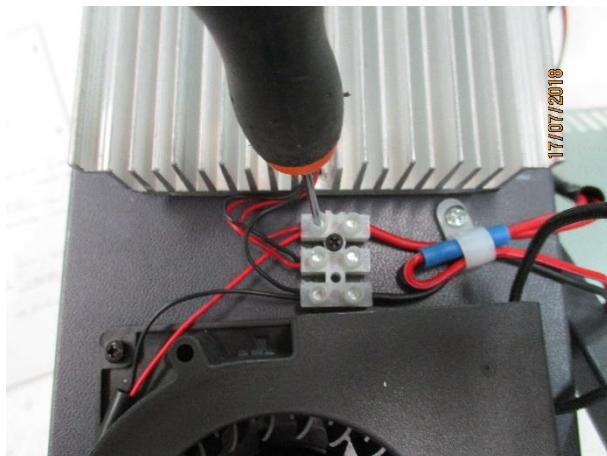

3. Unscrew the bolts fixing the fan wires and then disconnect the wires


## HOW TO REPLACE THE PLATE

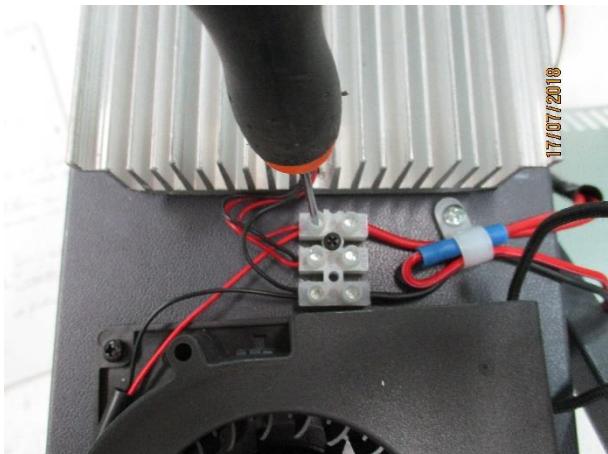


1. Disconnect all the plate's wires



2. Unscrew the heatsink (2 screws)

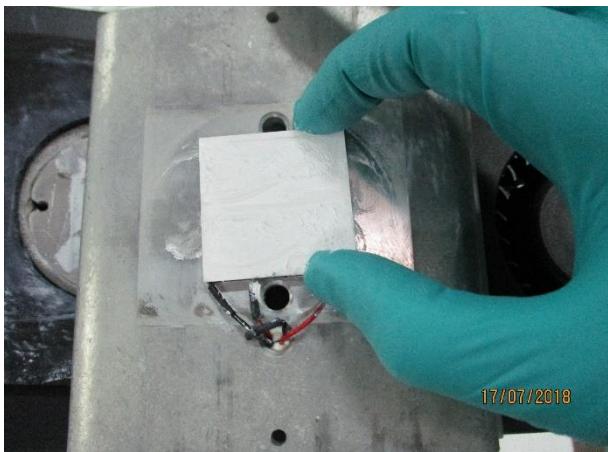

3. Pull the plate to remove it

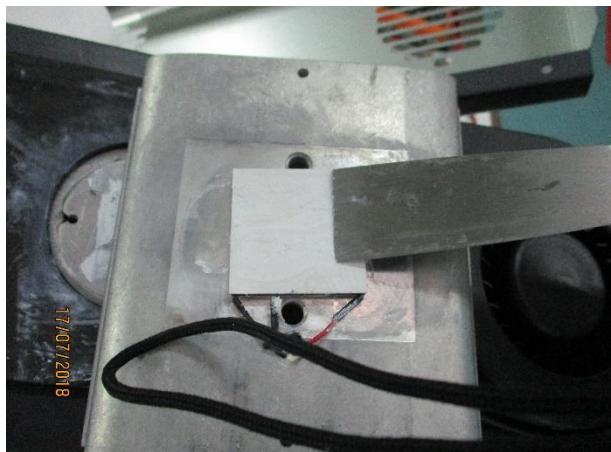

4. Spread a thin layer of conductive paste on the new plate, and reverse the procedure to replace it