

TECHNICAL FEATURES

- Remote controlled centralized door locking
- Variable code VHC
- Connection/disconnection blinker signal
- Control outlet LED

SETTING AT WORK

CENTRALIZED DOORS LOCKING AND WINDOWS CLOSURE

You obtain centralized door locking and window closure by pushing radio transmitter push button number 2 (see the picture B).

CENTRALIZED DOOR OPENING


You obtain centralized door opening by pushing radio transmitter push button number 1 (see the picture B).

TRANSMITTERS AUTOPROGRAMMING

Turn ON the ignition key with central alarm unit disconnected, push together the push buttons, **withing 5 seconds** (2 and 1-see picture B) and the LED flashing will be indicate autoprogramming entering.

Now push together the push buttons, (2 and 1-see picture B) of the transmitter that has to be programmed.

VERY IMPORTANT: Each transmitter that won't be programmed during programmation mode, will be automatically excepted. This will grant more safety in the case that one transmitter will be lost. By turning OFF the ignition key you'll exit from programmation mode.

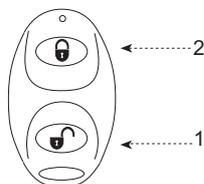


CE 0678 Picture B



www.vegaelettronica.it

Installation Diagram

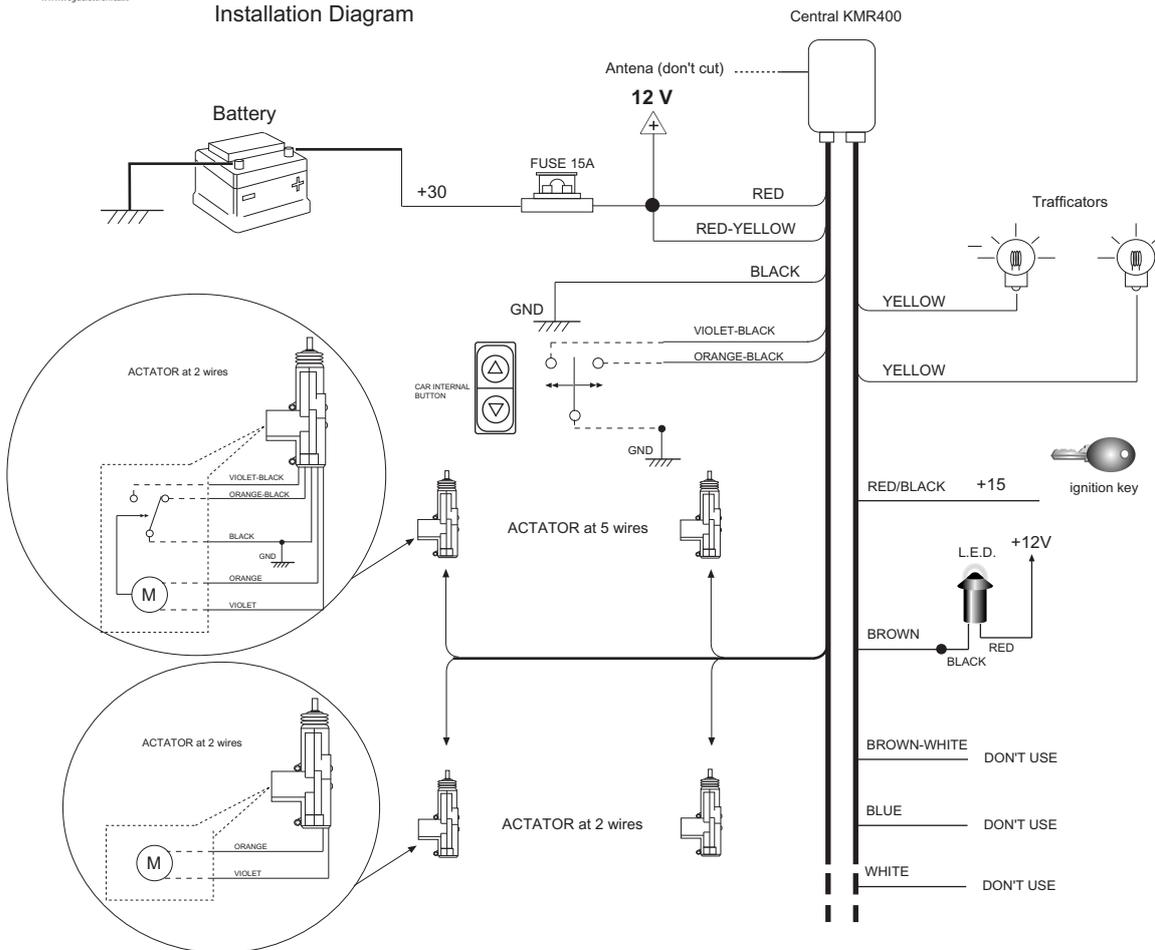

RADIO CONTROLLED CENTRAL DOOR LOCKING

KMR400

USE AND FITTING INSTRUCTION

KMR 400 UK 07/2003