


49T
4050


Peugeot Rifter L1 Md.2018

Side bar 51 mm short
Flankenschutzrohr 51 mm kurz
Côté bar 51 mm court

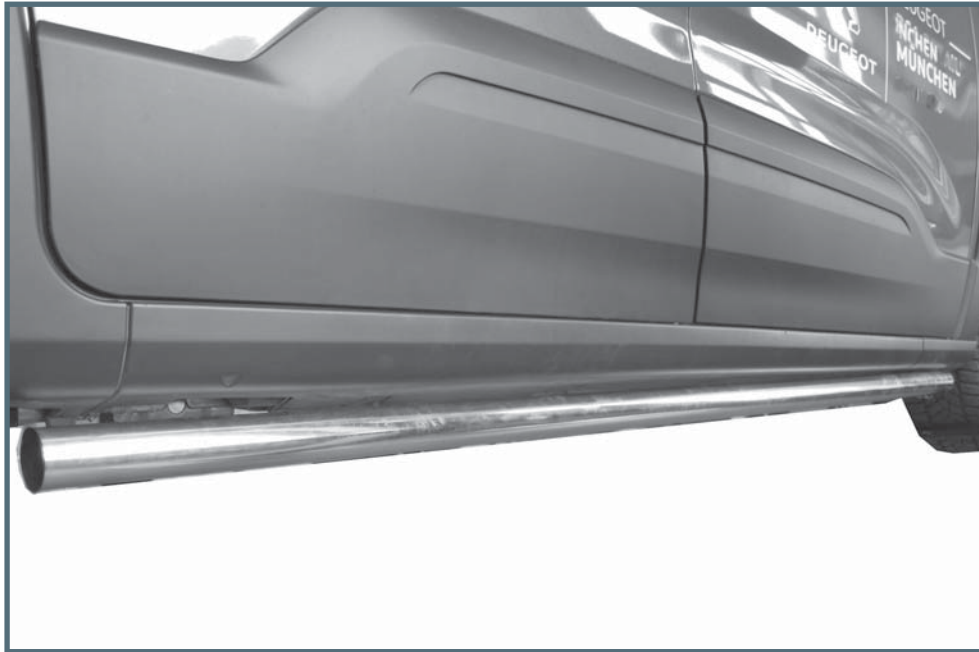

ASSEMBLY INSTRUCTION

Montageanleitung • Instructions de montage

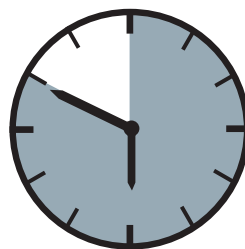


50 Minuten

article no.:
19T4050 (S) inox
19T5050 black steel

Revision 2: 23.10.2019


www.antec-online.de







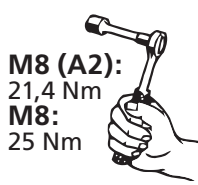


19T4050.1 / 19T5050.1



mounting kit: 19T9050

	M8x40; DIN 933 Zn	4x
	M8x25; DIN 933 A2	4x
	M8; DIN 934 Zn	10x
	SW 13	4x
	Ø 8,4; DIN 125 Zn	4x

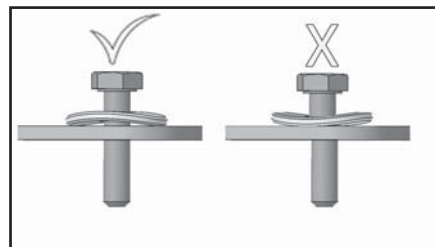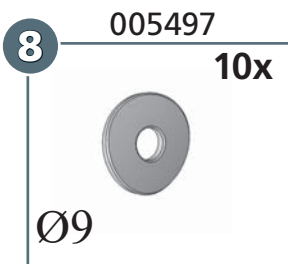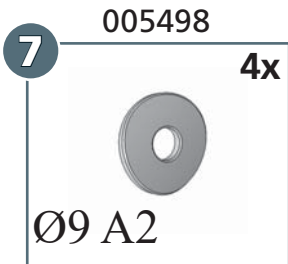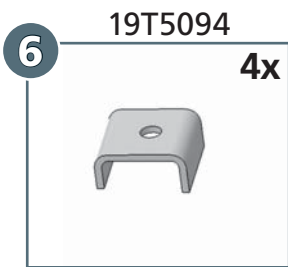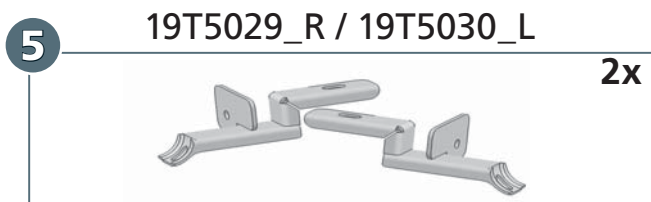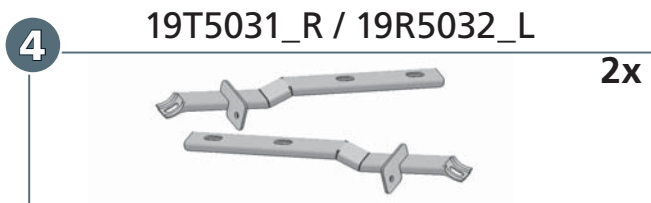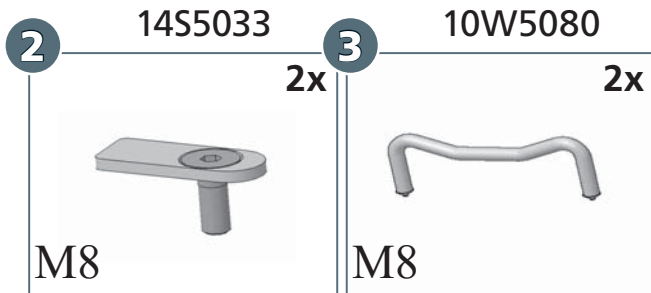

article no.:
19T4050 (S) inox
19T5050 black steel

Revision 2: 23.10.2019



