


All connectors viewed from wire side.

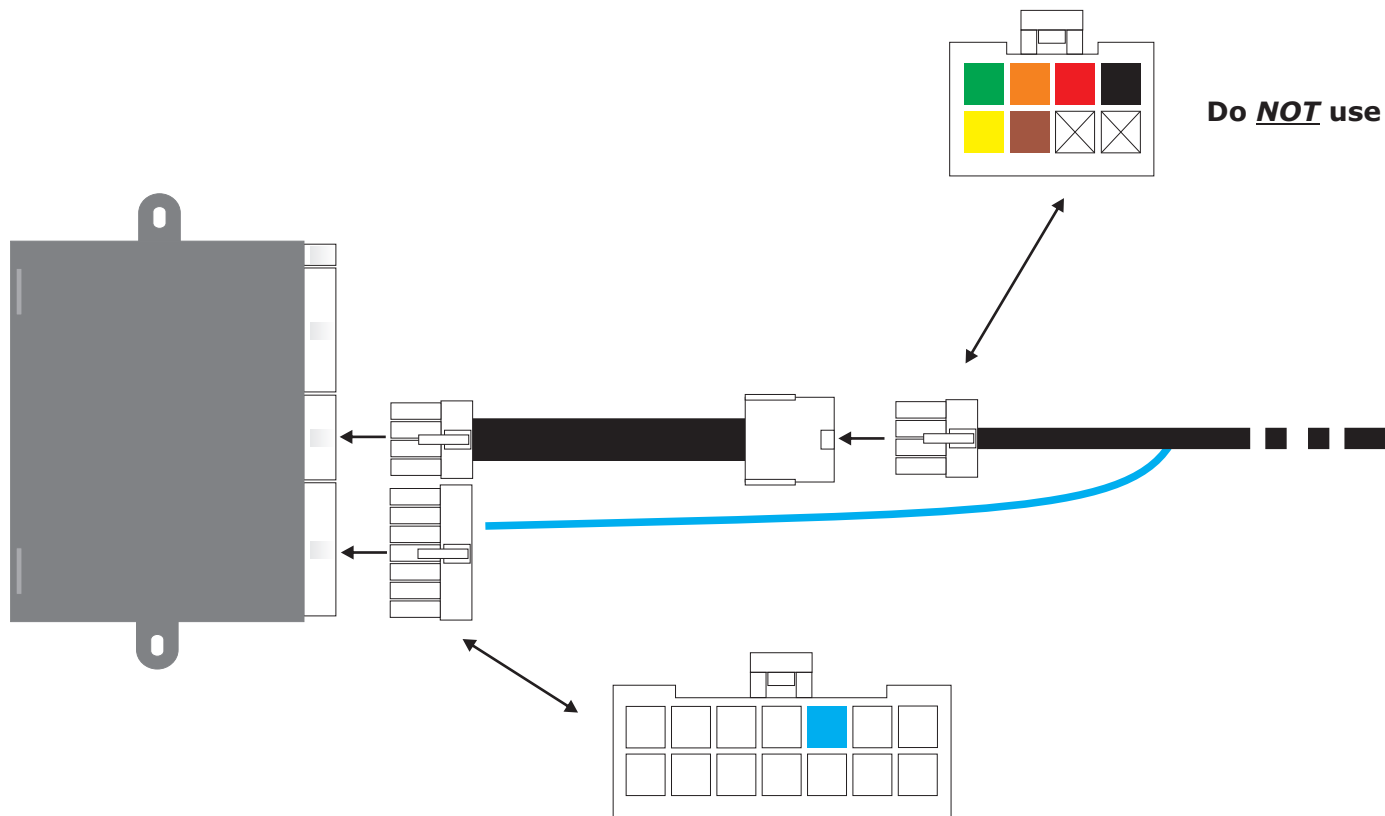

Do **NOT** use original colour coding!!



Mount the Lite-On control lever on the left side of the steering wheel with the enclosed fittings. Mount the control lever at the same angle as the indicator lever. Insert the terminals into the connector, according to the drawing.