


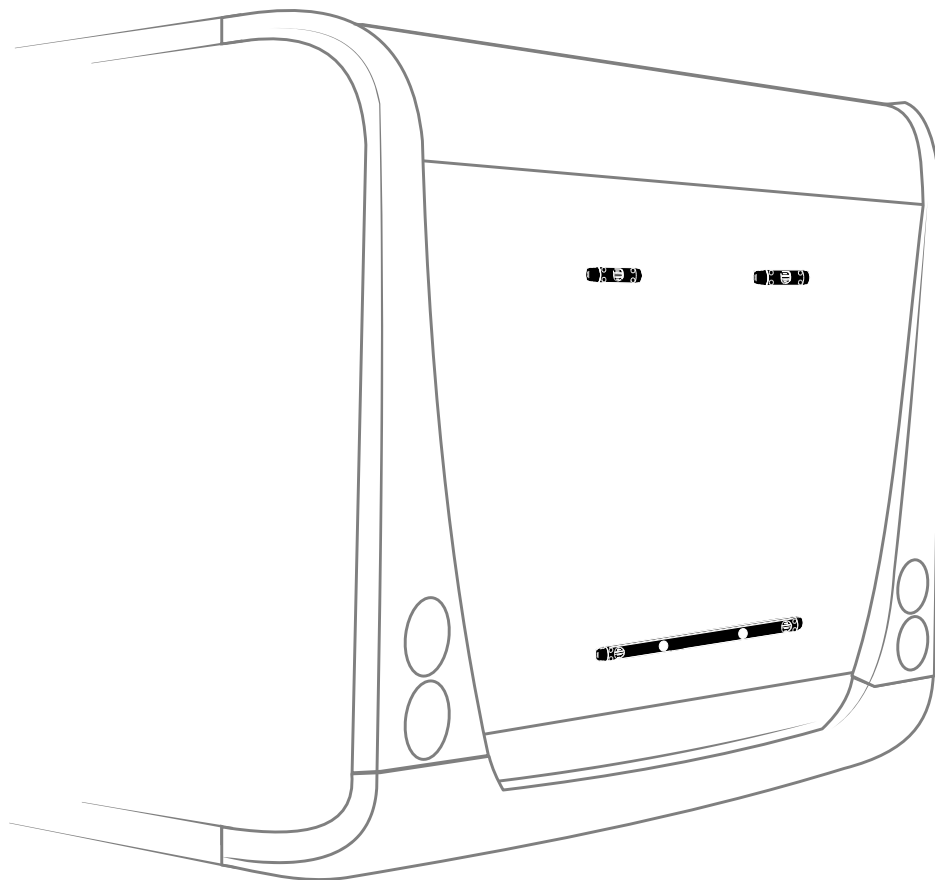
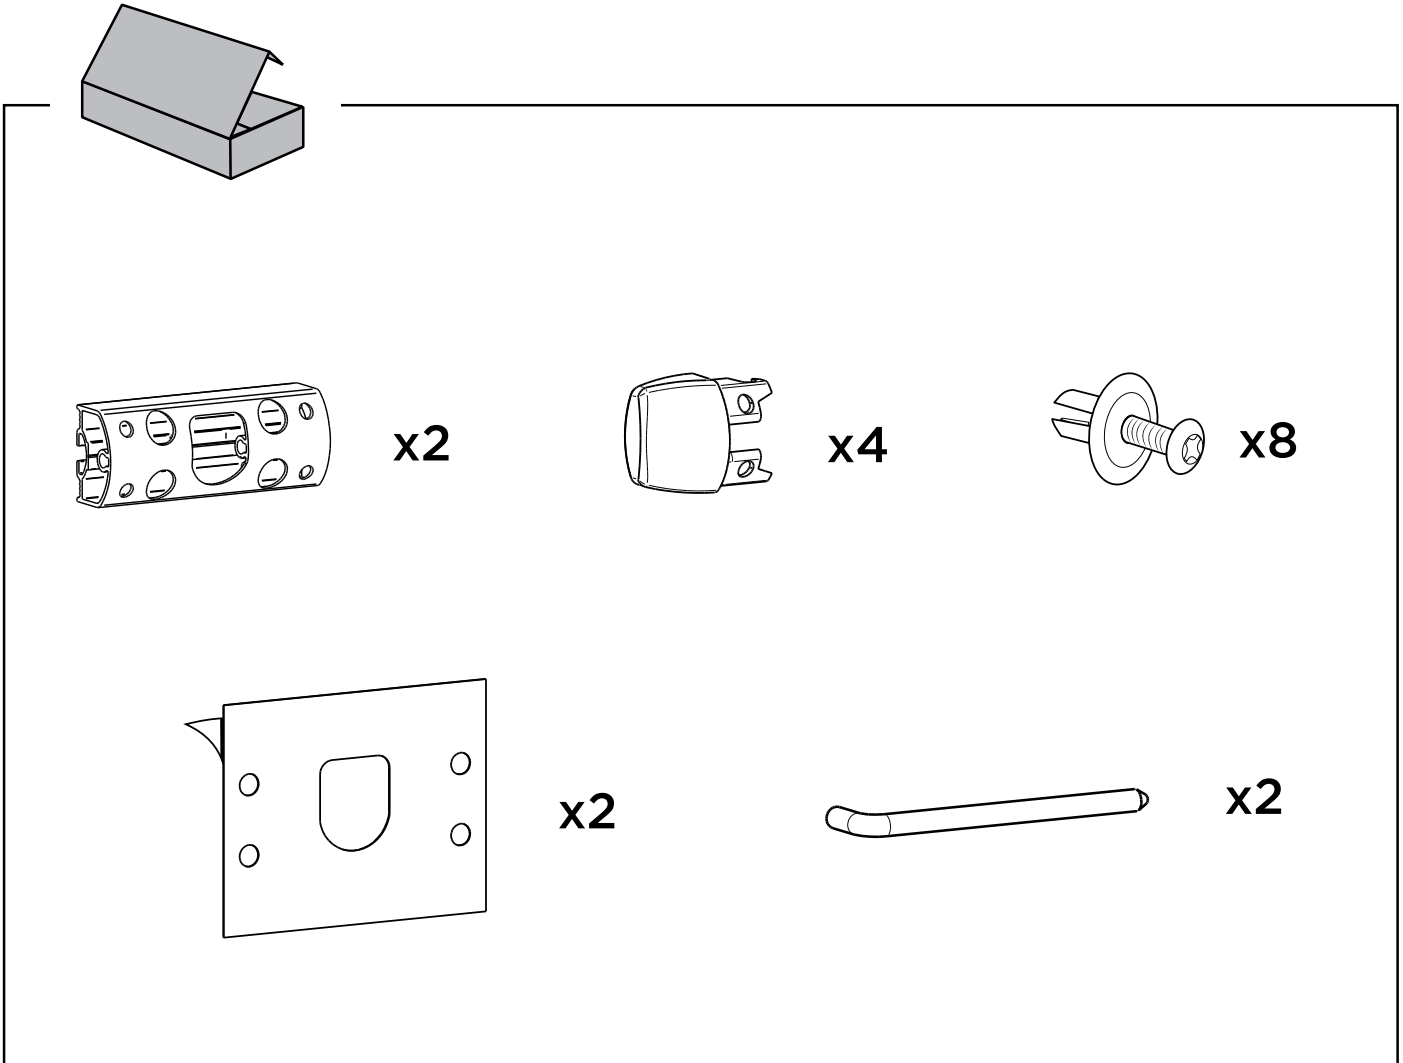


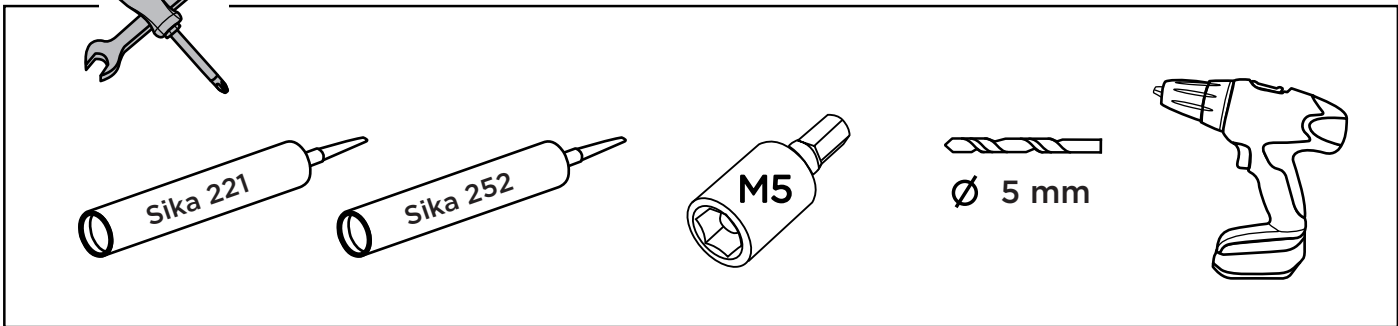

## BC Adapter Hymer Top Bracket


# ➤ Instructions

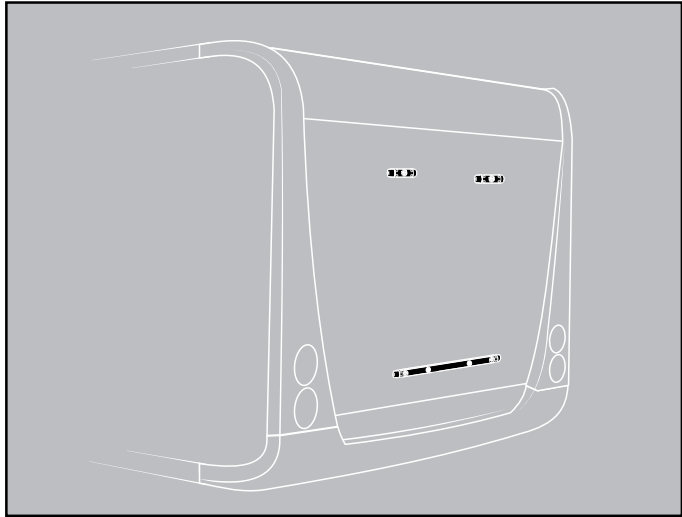

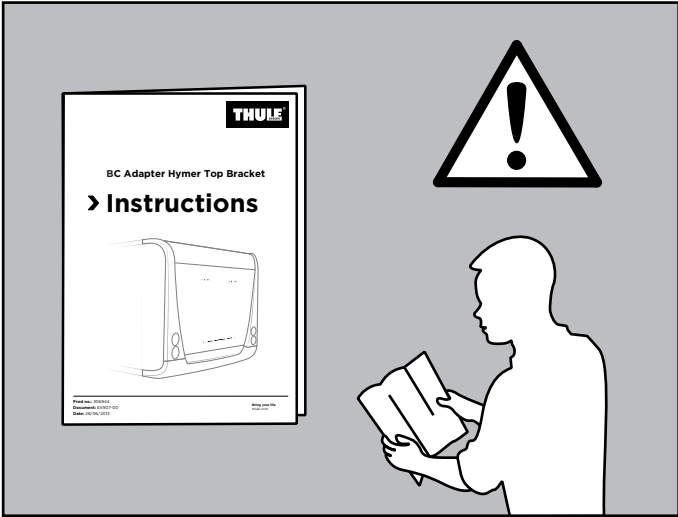


➔ For complete installation, see instructions Bike Carrier


1A

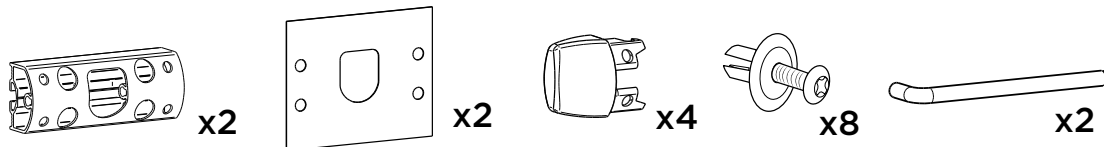


1

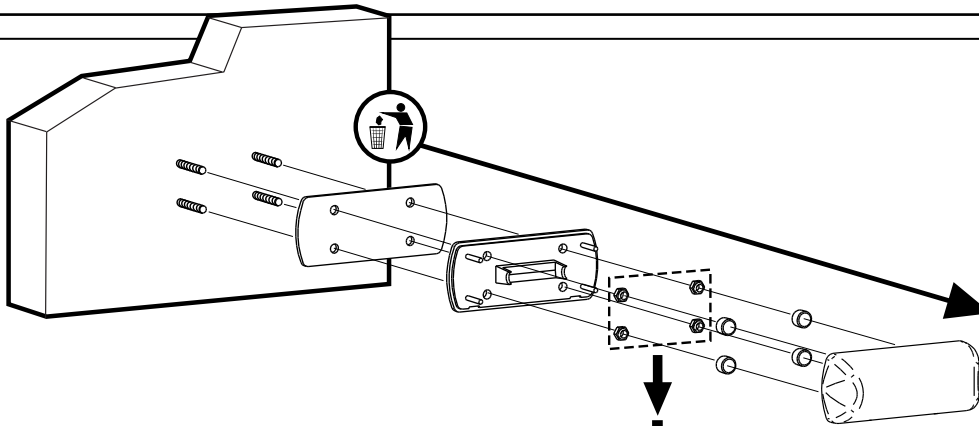

2

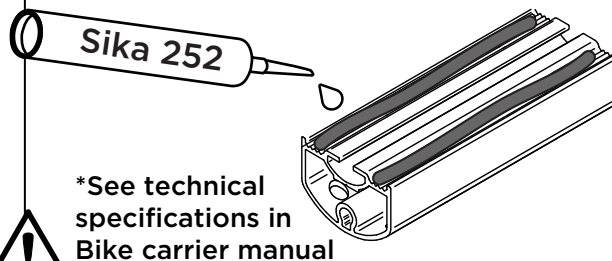


3

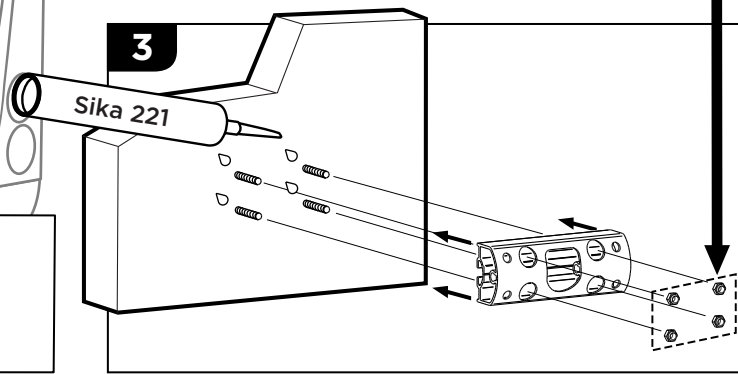


**OPTIONAL ( 308954 )**  
Bottom mounting rail blind

600 mm

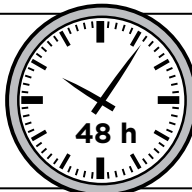



**Glue / Lijmen / Verklebung:**  
Thule recommends / beveelt aan / empfiehlt: **SIKA 252 or Terostat MS937**  
Primern und Abdichtung nach Anweisung des Dichtmittelherstellers.  
Voorbehandeling en afdichting volgens de voorschriften van de lijmfabrikant.  
Preparation and sealing according to the prescripts of the glue supplier.

4

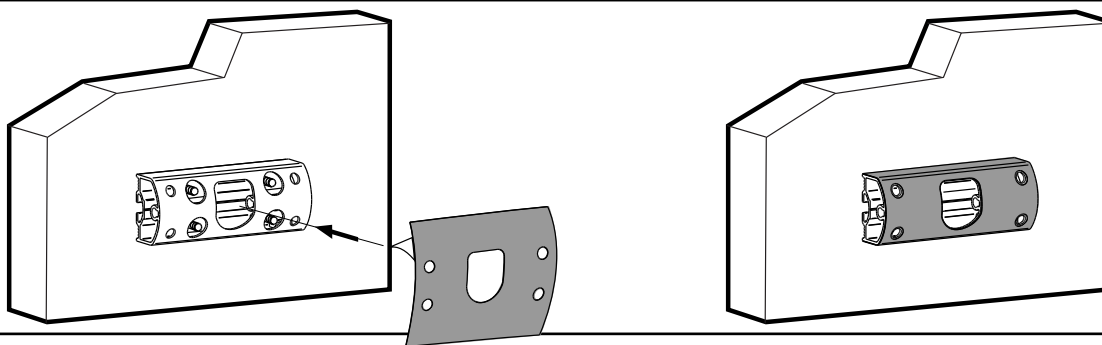


➔ For complete installation, see instructions Bike Carrier

5A

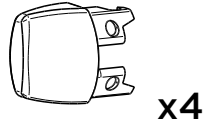

1

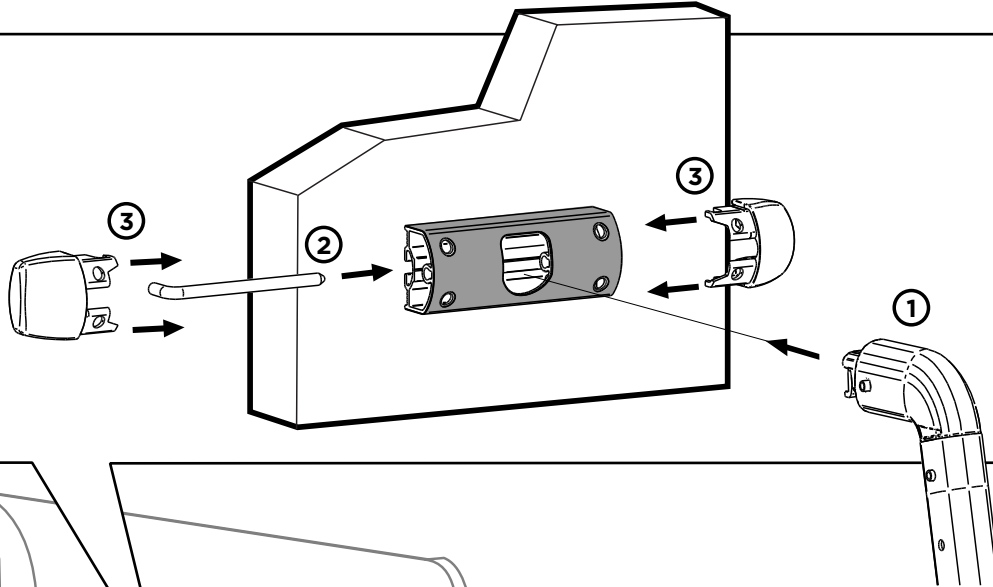

2

