


VGEB


M6 Stainless steel eye bolts

SUPPLIED COMPONENTS

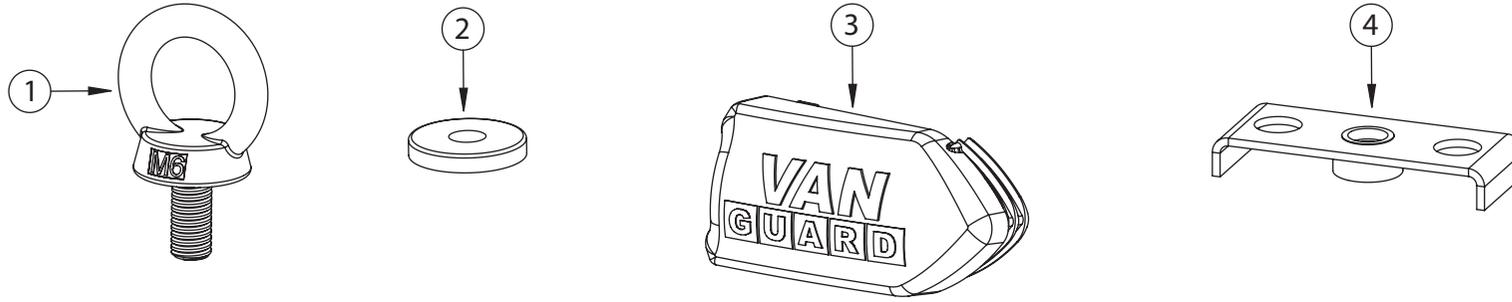


#	DESCRIPTION	QTY	QTY
		VGEB-1	VGEB-2
1	M6 STAINLESS STEEL EYE BOLT	2	4
2	M6 WASHER	2	4
3	ROOF BAR END BUNG	1	2
4	RAIL PLATE	2	4


1 Remove and discard one end bung from the roof bar you wish to place the eye bolts in. **Please note, the end bungs are handed.**

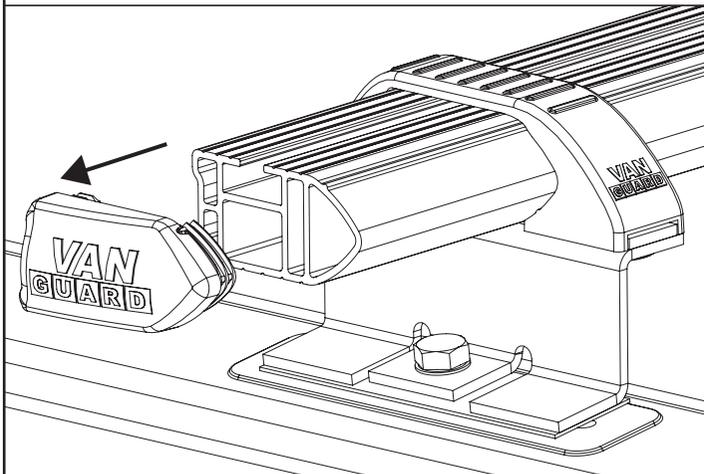

2 Slide the rail plates into t-slot of the roof bar and fit the newly supplied end bung.

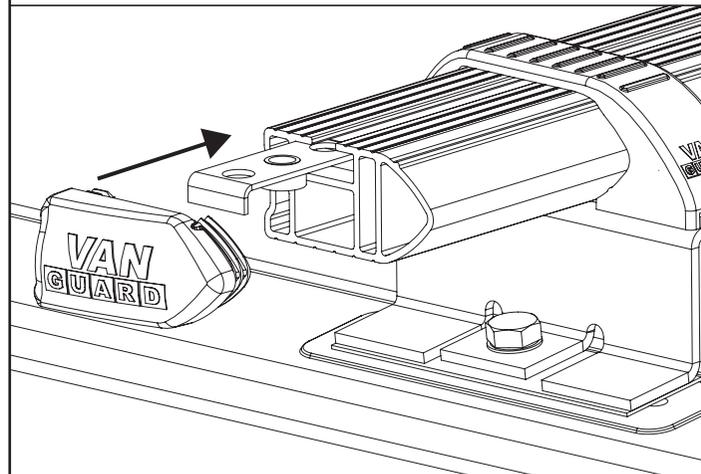

3 Secure the eye bolts by bolting down into the rail plates. After tightening by hand, use a lever to further rotate the eye bolt ensuring that it's parallel to the side of the van.

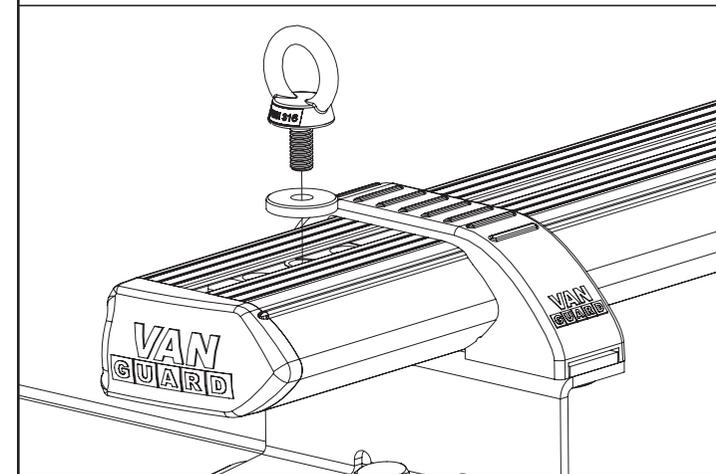

TOOLS REQUIRED: LEVER

This FITTING INSTRUCTION is the property of VAN GUARD ACCESSORIES LTD. and must not be used for manufacturing purposes, copied nor communicated in any way to third parties without written permission from VAN GUARD ACCESSORIES LTD.
VGEB - IW - 03/05/13

Van Guard Accessories Ltd
Fair Oak Close, Exeter Airport Business Park,
Exeter, Devon, EX5 2UL
www.van-guard.co.uk