


The EZDown installation guide for Nissan Navara



STABILIS



ED0700 Kit Components

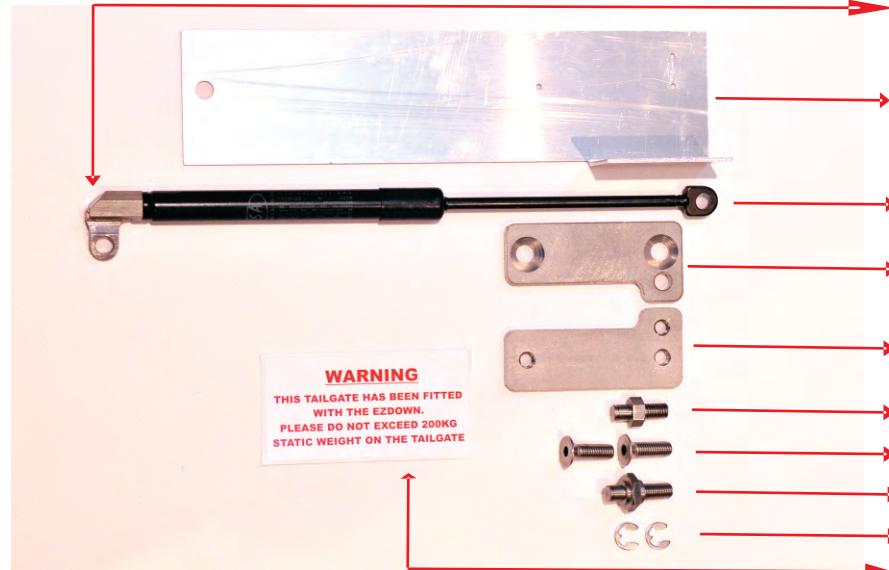

WARNING
THIS TAILGATE HAS BEEN FITTED WITH THE EZDOWN. PLEASE DO NOT EXCEED 200KG STATIC WEIGHT ON THE TAILGATE

Parts Description

P/N

Qty

Top Assembly	ED0001	1
Drill Jig	ED0706	1
Damper	557597	1
External Mounting Bracket	ED0704	1
Internal Mounting Bracket	ED0703	1
Bottom Mounting Stud	ED0702	1
M8 Counter Sunk Bolts	ED0308	2
Top Mounting Stud	ED0701	1
E Clip 7mm	ED0206	2
Warning Label	ED0006	1
Instructions	ED0705	1

Tools Required:

- 1) 12mm ring spanner or socket and wrench
- 2) 13mm ring spanner or socket & wrench
- 3) Philips screw driver
- 4) Drilling machine with 8.5mm drill bit
- 5) 5mm Allen Key

There are two parts of this vehicle that you will be working on:

- A/ Tail gate pillar
- B/ Tail gate hinge

Please note the safety guidelines with reference to loading weight on tailgate after installation of EZDown .

Visit our website at www.ezdown.co.za to see EZDown in action.

Family Safety . Convenience . Easy to assemble and install . Hands free lowering . Eliminates damage to vehicle . Cost effective

STEP 1

Remove the 8 screws from the inspection panel on the tailgate.



STEP 2

Remove the Inspection Panel from the tailgate.



STEP 3

Remove the tailgate cable mounting bolt on the right hand side of tailgate closest to the lock in order to allow the fitment of the drilling jig.



STEP 4

Fit the drilling jig in place by inserting the cable mounting bolt through the hole in the drilling jig to locate the drilling jig, and then fasten the bolt back to hold the jig in place.



STEP 5

Drill the 3 holes into the tailgate in the areas that are aligned on the template of the drilling jig. Ensure to clean all the shavings away and it is preferable to drill these holes in conjunction with a vacuum cleaner to suck away the metal shavings as if these are left inside they could cause corrosion.



STEP 6

Remove the Drilling jig. Re-attach the cable mounting on the tailgate as in Step 3 when you removed it.

STEP 7

Insert the inner mounting bracket (with the 3 threaded holes) through the inspection panel aperture and align the 3 holes with the 3 holes you have just drilled.



STEP 8

Align the outer mounting bracket (with the 2 counter sunk head bolts in the holes). Do not tighten.



STEP 9

Insert the damper bottom mounting stud and hand tighten to allow all to align. Then proceed to tighten all 3.



STEP 10

Remove the top tailgate cable mounting stud and replace it with the EZDown mounting stud, making sure to allow the cable to rotate freely once tightened in place.



STEP 11

Mount the damper in place facing piston rod down, first attaching at the top mounting position and then the thinner mounting at the bottom mounting stud.



STEP 12

Insert the top and bottom e clips into the groove and push them on to locate.



STEP 13

Put the inspection cover back in place and fasten down with the 8 screws..

WARNING
**THIS TAILGATE HAS BEEN FITTED
WITH THE EZDOWN.
PLEASE DO NOT EXCEED 200KG
STATIC WEIGHT ON THE TAILGATE**

Fit the warning sticker to the tailgate to ensure the tailgate does not get overloaded.